
EGLX0010 - REV. A CHESTER/LESTER INSTRUCTIONS

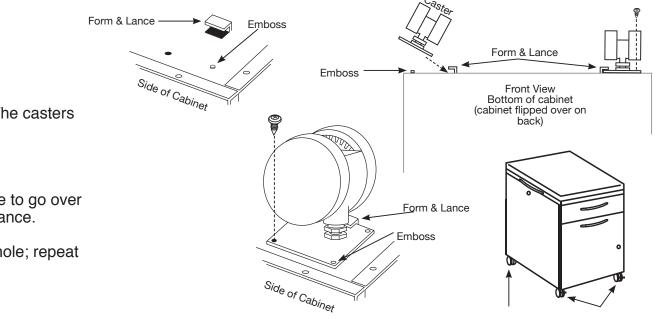

Non-Locking Casters Locking Casters

Caster Installation

- 1. Remove the caster kit from the drawer. The casters with the brakes go on the front.
- 2. Lay the cabinet on its back.
- 3. While installing the caster, angle the plate to go over the emboss, and then under the form & lance.
- 4. Install 1 sheet metal screw in the screw hole; repeat

