
SLMX01010 - REV. A | SLIM INSTRUCTIONS


Caster Installation:

 
- Remove the caster kit from the drawer, the casters with the brakes go on the front.
- 2. Lay the cabinet on its back.
- 3. While installing the caster, angle the plate to go over the emboss, and then under the form & lance.
- 4. Using a power drill and torx t20 bit, install 1 torx t20 screw in the screw hole; repeat steps 3-4 for the rest of the casters.

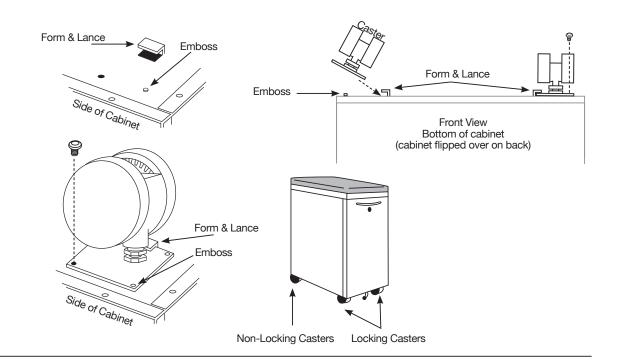

Fifth-Wheel Installation:

- 1. Remove (2) Torx T20 screws from the caster kit
- 2. Place fifth-wheel on top of holes on bottom of drawer. The holes in the bottom of the slide out door will only line up with the holes in the fifth wheel when the fifth-wheel is installed properly. (see illustration to the right).
- 3. Screw in the (2)Torx T20 screws with a torx t20 HAND screw driver so as not to over-power and damage the product

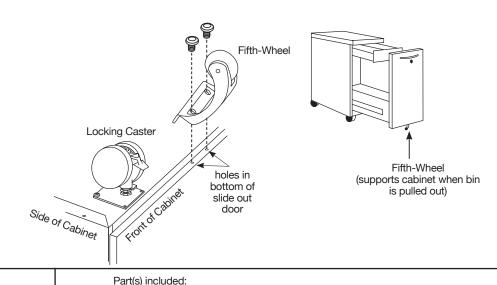









torx t20 screw