

Caster Installation:

1. Remove caster kit from drawer.
2. Carefully rotate cabinet on its back and then onto its top, all while on a soft surface to prevent damage. Do not slide cabinet while on back or top to prevent damage.
3. Identify caster mounting locations – locking casters install toward front of cabinet and non-locking casters install toward rear of cabinet.
4. Align caster mounting plate holes with holes in cabinet frame. Fig. 1
5. Fasten each caster with (4) Silver #10 Torx T20 screws. Repeat steps 4-5 for remaining casters. Fig. 1
6. If included in kit, position fifth wheel to holes on bottom edge of lower drawer with lip facing in. Fasten using (4) Black #8 Torx T20 screws. Repeat for remaining fifth wheel. Fig. 2
7. Carefully rotate cabinet upright onto casters.

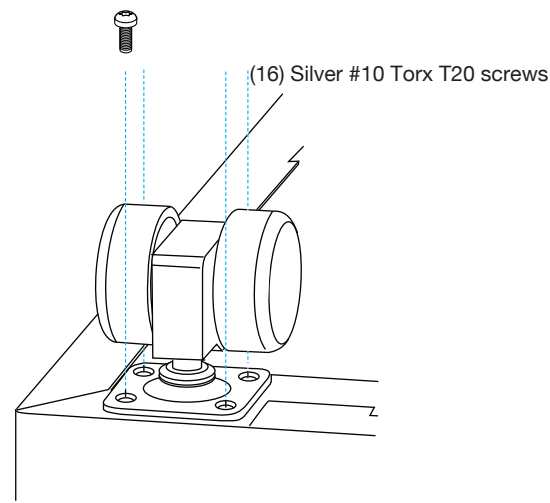


Fig. 1

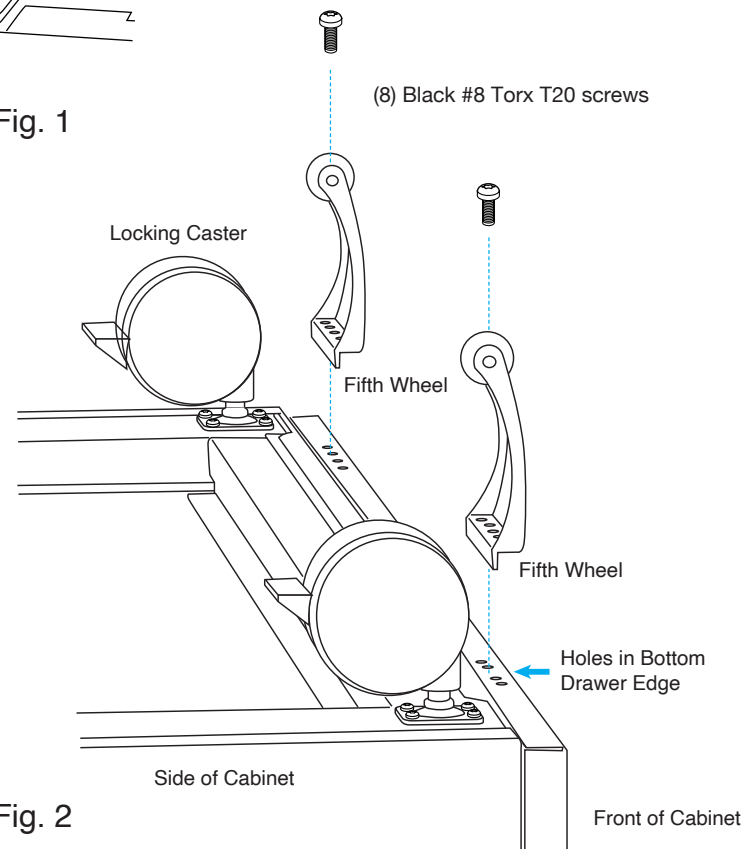


Fig. 2

Tool(s) Needed:



Torx T20
Hand Screwdriver

Optional Tools:



Torx T20 bit



Power Drill

 
Caster Hardware Included:



(16) Silver
#10 Torx
T20 screws



(2) locking
casters



(2) non-locking
casters

Fifth Wheel Hardware: (not included in all kits)



(8) Black
#8 Torx T20 screws



(2) Fifth Wheels