



## Adjust the Door Hinges

After leveling the cabinet, examine the gaps between the doors and the cabinet. If the gaps are uneven, the doors need to be adjusted.


1. **Vertical Gaps:** To improve the vertical gap, adjust the Phillips screw. Tightening the screw will pull the door toward the center of the cabinet. Loosening the screw will pull the door toward the outside edge.

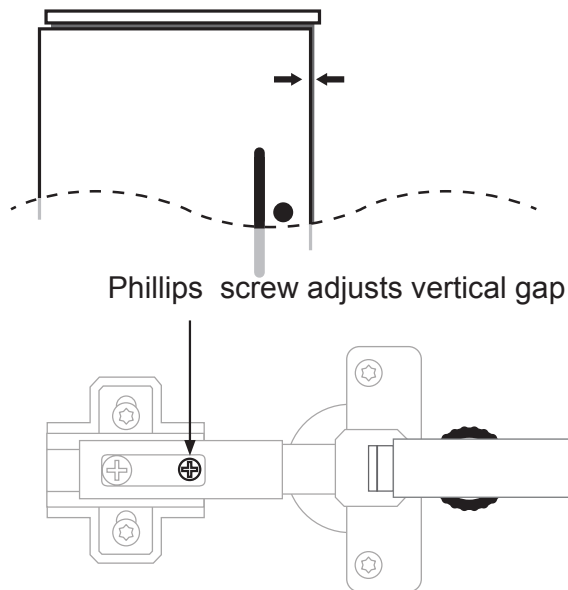


2. **Horizontal Gaps:** To improve horizontal gap, loosen the Torx screws only enough to slide the hinges. Do not remove the screws completely. Carefully slide the doors up or down until the horizontal gap is uniform. When properly aligned, tighten the screws.

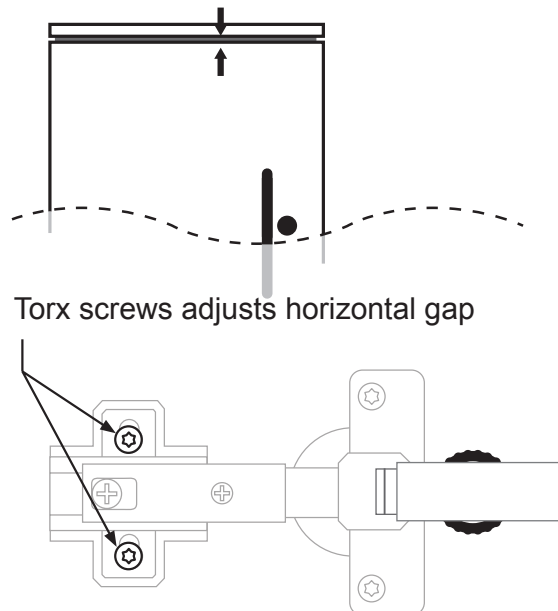

3. **Side Gaps:** To improve the door gap at the side of the cabinet, turn the screw clockwise to reduce the gap, counterclockwise to increase the gap. Do not remove the screw.

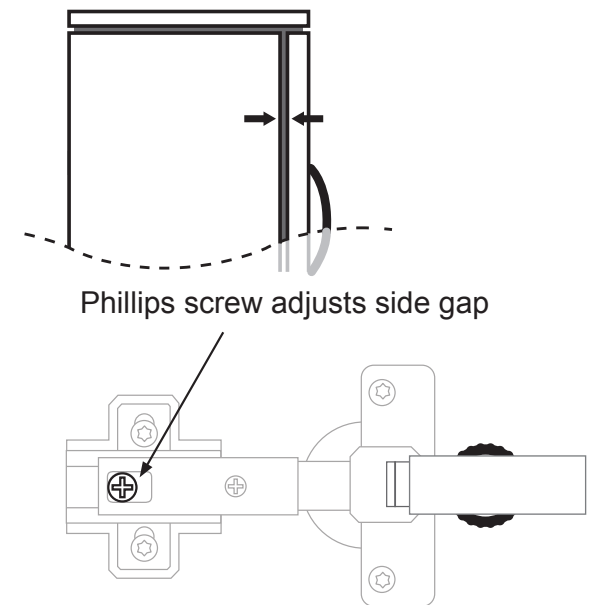

## Adjust the Door Closing Speed

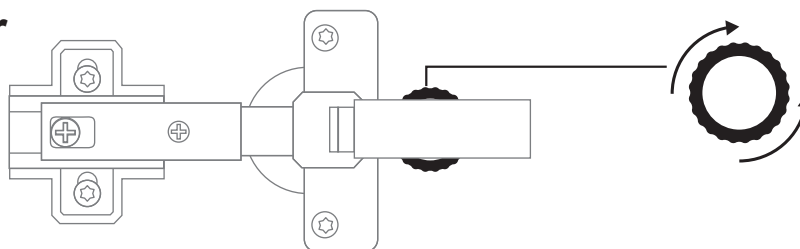

Turn the thumbwheel clockwise to slow the closing speed, counterclockwise to increase the closing speed.