



Note: Modesty panels must be fastened to bookcase tower using drill-point screws.

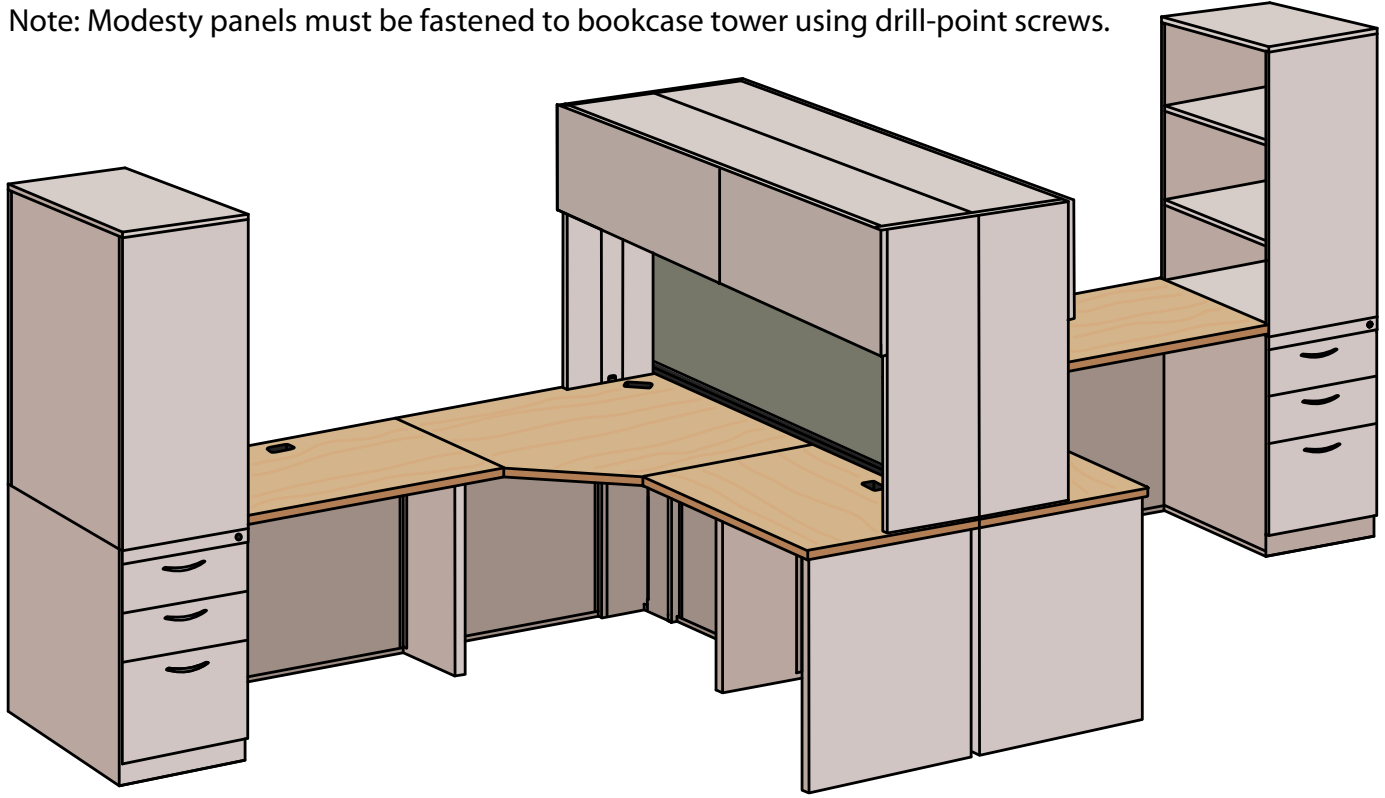

199"

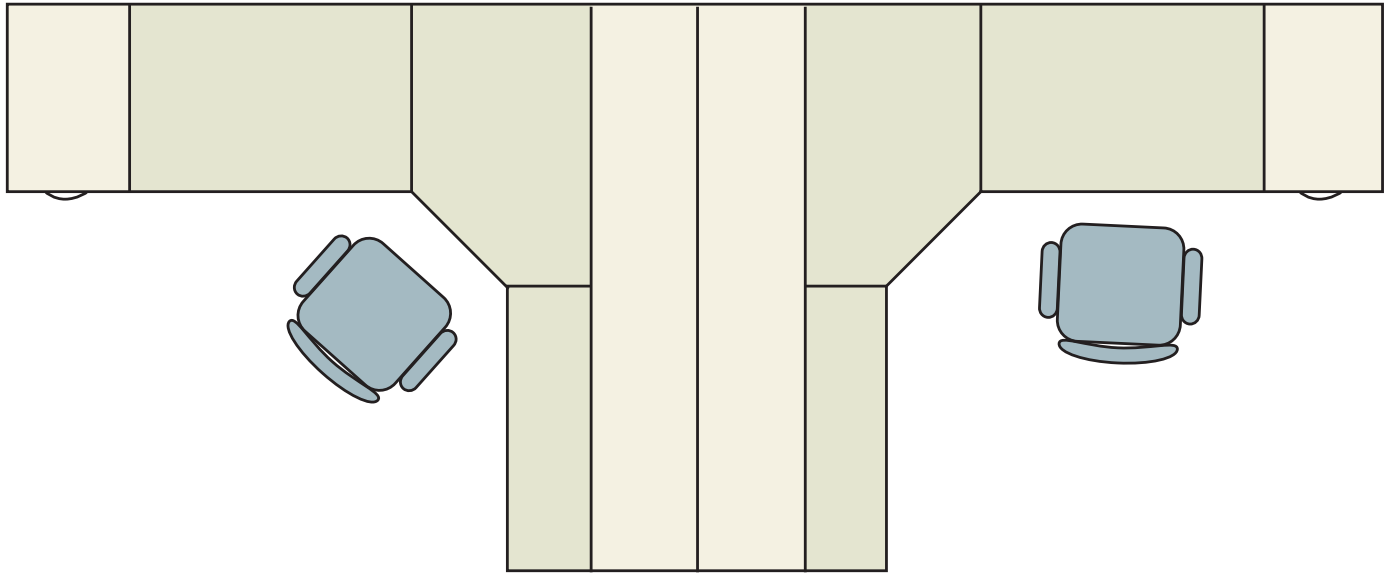

72"

QTY	PART #	DESCRIPTION
1	BL? 6511 R	65-7/8" tower, left, with bracket, 23-1/2" D x 15-1/4" W
1	BR? 6511 R	65-7/8" tower, right, with bracket, 23-1/2" D x 15-1/4" W
2	CS 2436 F	Corner: straight edge, full mod., 24" D x 36" W
2	WS2348	Work surface, 23-1/2" D x 48" W
2	GKM4427	Full modesty, sold separately
2	RT 2436 *F	Return: no grommets, full mod., 24" D x 36" W
2	HGC 7202 *	Full hutch, 13-5/8" D x 72" W

