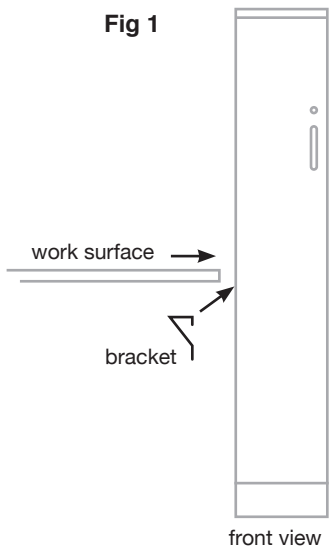
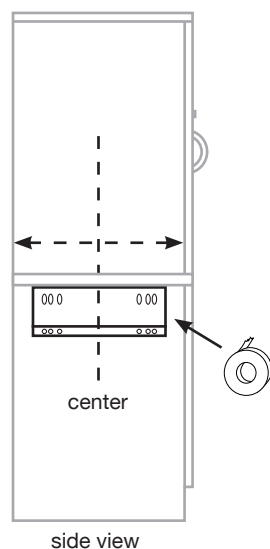
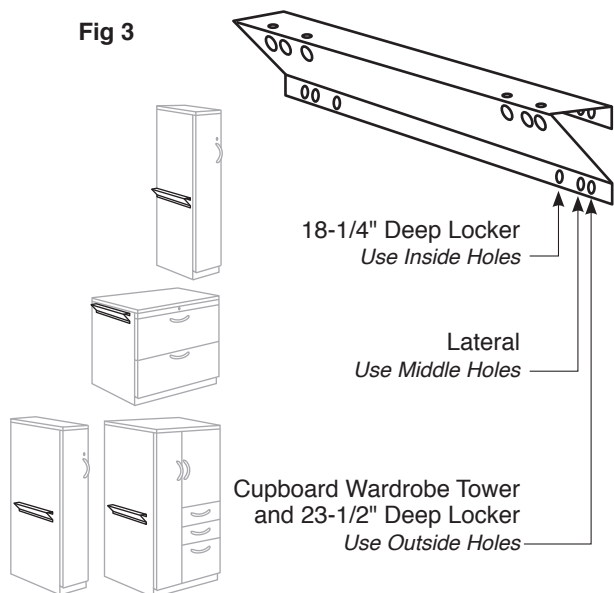
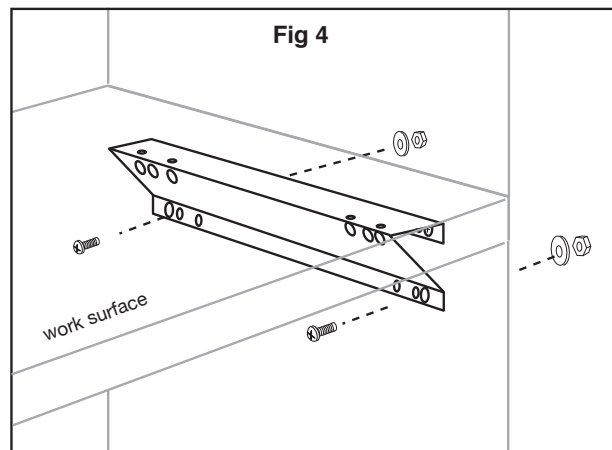
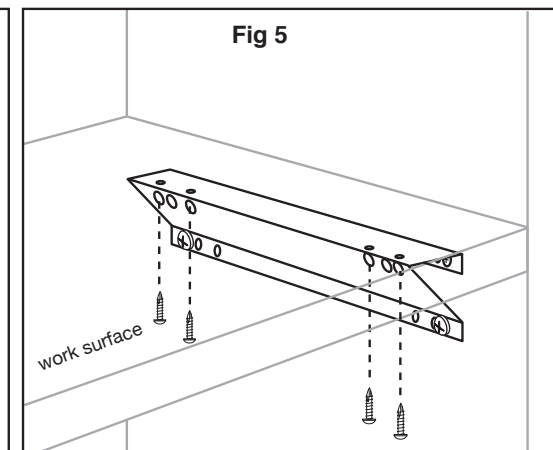


Fig 1

Fig 2

Fig 3

Fig 4

Fig 5


1. Place cabinet (you are attaching bracket to) next to the work surface. Fig. 1
2. Center Bracket on cabinet (do not include the door/drawer front in your measurement). Fig. 2
3. Tape Work Surface Supporting Bracket to cabinet in desired location.
4. Determine and mark bracket holes based on which cabinet it is on. Fig. 3
5. Remove any drawers in cabinet near the bracket.
6. Remove bracket and tape, drill pilot holes with 1/8" drill bit. Wear protective eyewear.
7. Using the 1/8" holes as guides, finish drilling holes with 13/32" drill bit.
8. Insert the supplied bolts through the bracket into the holes in the side panel. Secure the bolts on the inside of the cabinet using the flat washers and nuts. Fig. 4
9. Align work surface to cabinet and bracket. Put pressure on top of work surface and attach using 4 work surface screws. Fig. 5



power drill



#2 Phillips



work surface screw



Phillips screw driver



1/8" drill bit



13/32" drill bit



Bolt, Washer & Nut



Masking Tape