


1. Remove drawers before flipping any cabinet over.
2. Attach center leg to splice plate with 1/4 - 20 screw.
3. Attach splice plate with (8) sheet metal screws as shown.
4. Fasten common top with (16) work surface screws in the locations shown for both cabinets.

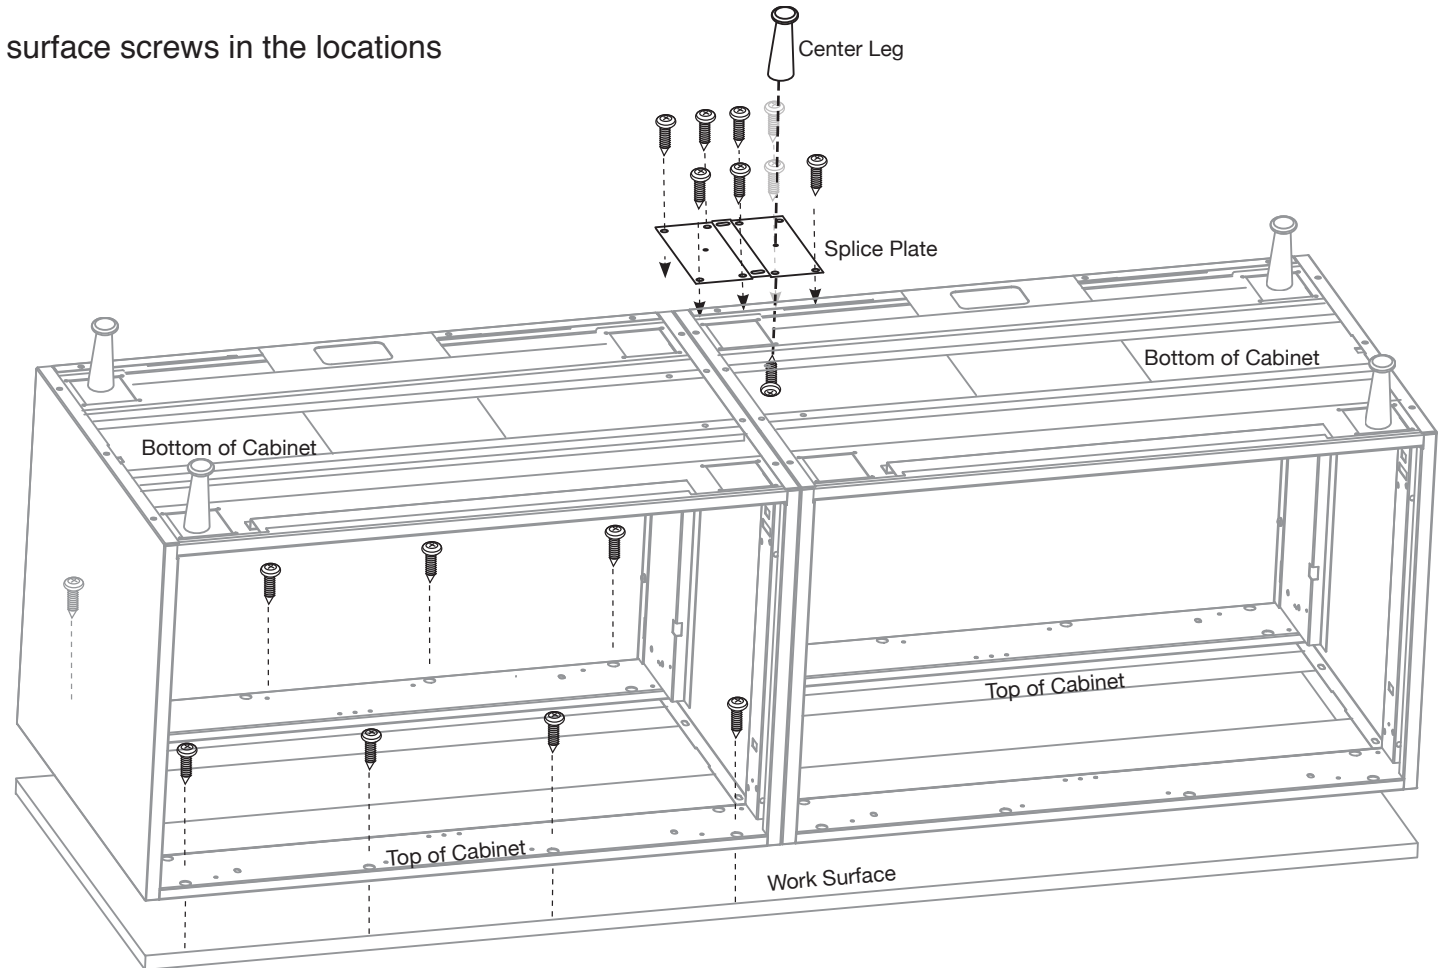

power drill



#2 Phillips



sheet metal screw



Phillips screw driver



work surface screw



1/4 - 20 screw