


(single, double, quad and cubbie lockers)


Side-by-Side Ganging

1. Open door and remove false floor(s) by pulling up on factory installed tape tail.
2. Align and level cabinets by adjusting leveling glides
3. Using an electric driver install the (4) #10 x 1/2" self drilling Phillips pan head screws through clearance/service holes on the side panels. Two service holes are located near the top and two near the bottom on each side as shown.
4. Insert the (4) cover plug caps on the top two service holes on each cabinet. The bottom service holes will be hidden by the false floor.
5. Remove tape tail and replace false floor(s).

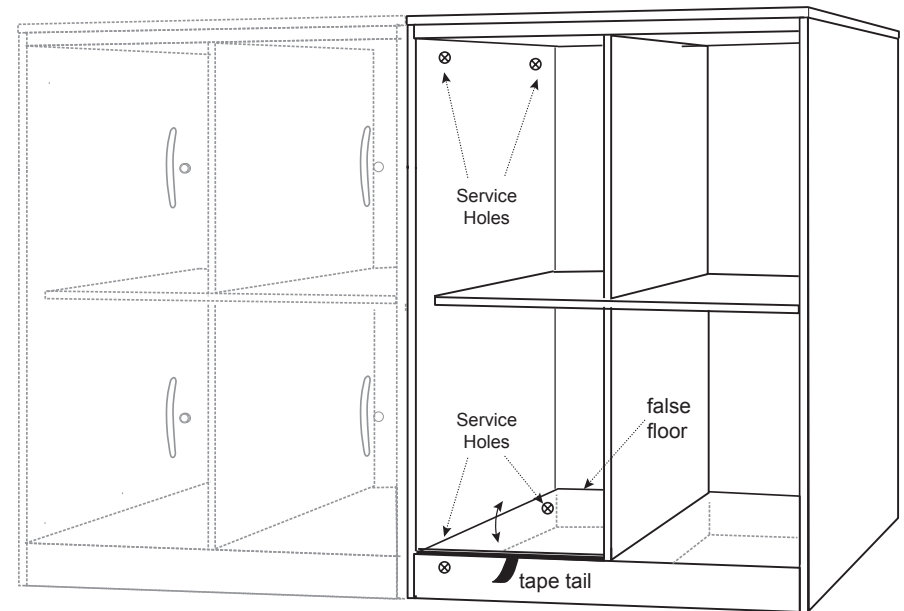


Back-to-Back Ganging

1. Open door and remove false floor(s) by pulling up on factory installed tape tail.
2. Align and level cabinets by adjusting leveling glides
3. Drill 5/16" holes through back panel approximately 2" from top and 1/2" in from inside edges.
4. Insert 1/4" pan head screw through 5/16" holes and tighten using the provided washer and nut.
5. Remove tape tail and replace false floors.

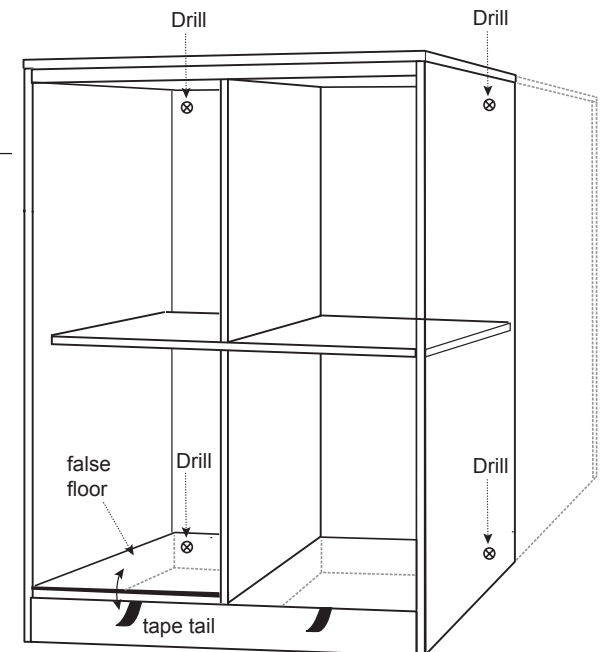


power drill



5/16" drill bit



#2 Phillips



1/2" wrench

(4) #10x1/2"
self tap screw(4) 1/4 x 20 x 3/8" pan
head(4) 1/4 x 20
nut

cover plug cap