

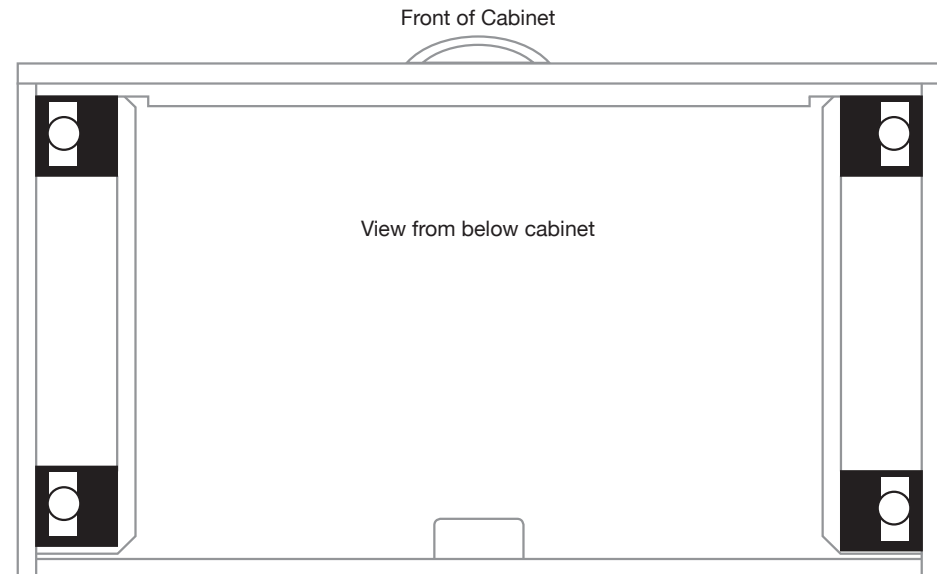


LRPX00045 - REV. B | CAYENNE® CABINET LEG INSTALLATION

1. Attach the four leg assemblies with the provided #10 X 1/2" Phillips sheet metal screws. Four screws needed for each leg assembly. See orientation options for your specific leg assembly.
2. Place leveler on cabinets and turn adjustable glides until cabinet is level.

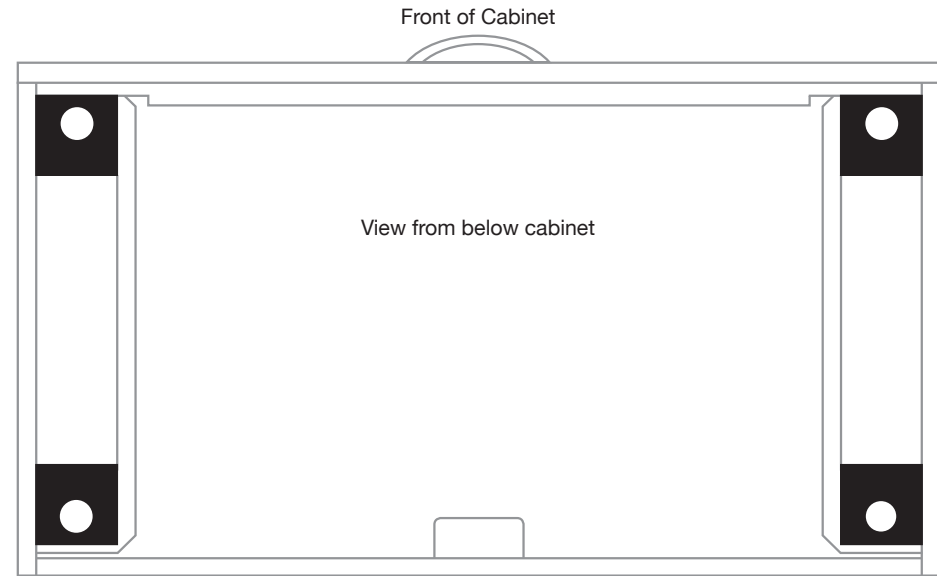

power drill

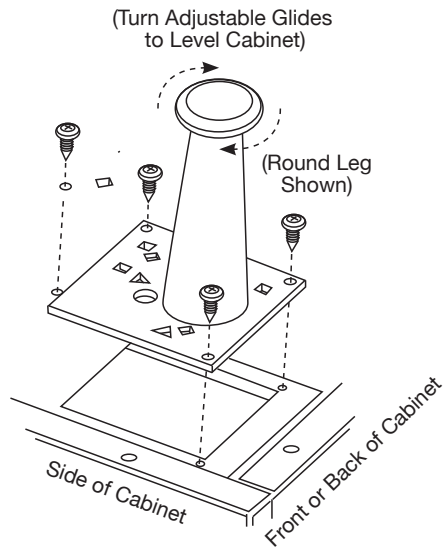


#2 Phillips



sheet metal screw



Phillips screw driver

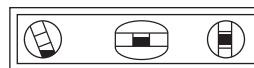

Level