## Drawer Removal

1. Fully extend drawer. While lifting on drawer front, tap down on slide using a non-marring hammer. When drawer is free from slide detent, rotate up and out.

2. First, ensure all slides are fully recessed into cabinet. Remove interlock cable from left side of cabinet. Starting at bottom of cabinet, pull cable away from slide to disengage.

## Slide Removal

3. Once cable is disengaged, fully extend drawer slide. Twist slide toward center of cabinet while tapping up near cabinet front with non-marring hammer. Once front of slide releases, pull slide straight out to remove.

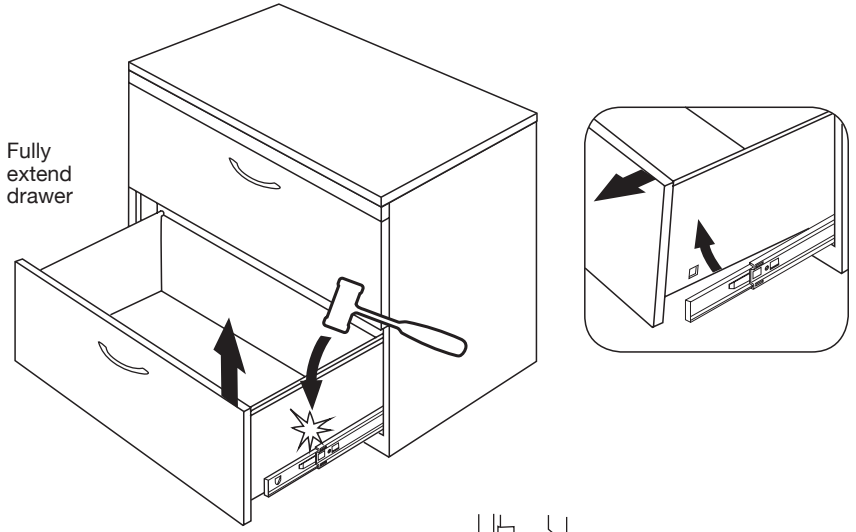


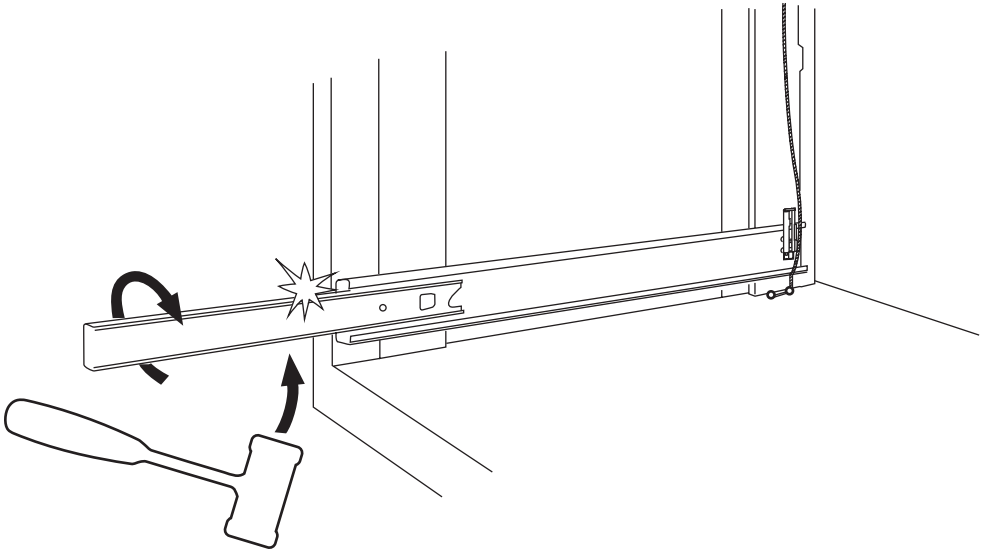

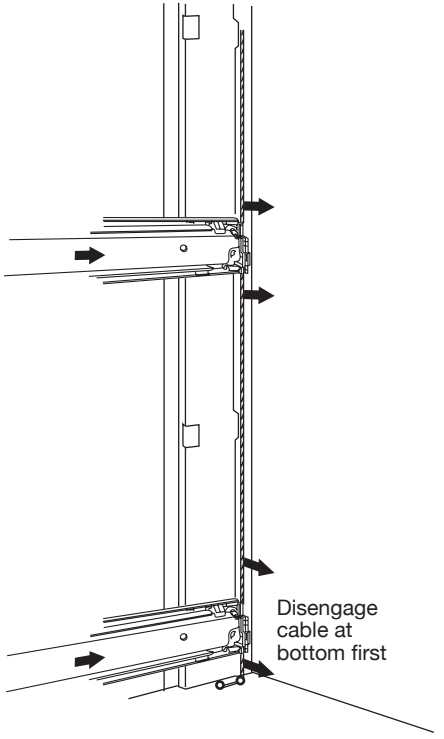


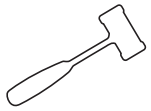

non-marring hammer

## Slide Installation

1. Insert new slide into rear connecting slot.

2. Line up slide bayonet with slot in front channel. When you install slide in front channel, you will feel it “snap” into place.

3. First, ensure all slides are fully recessed into cabinet. Starting with the top slide, push the interlock cable back into each slide until it clicks in place.

4. Check functions of interlock system by attempting to extend more than one left-hand slide at a time. Only one slide should extend at a time.

   WARNING: Failure to ensure proper function of interlock system can cause severe injury.

## Drawer Installation
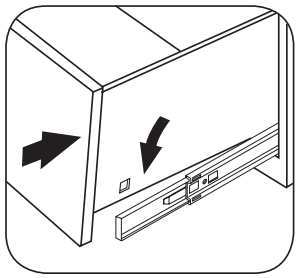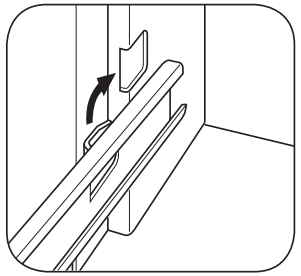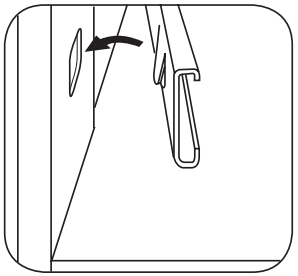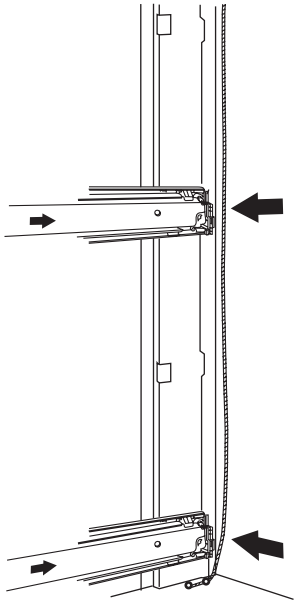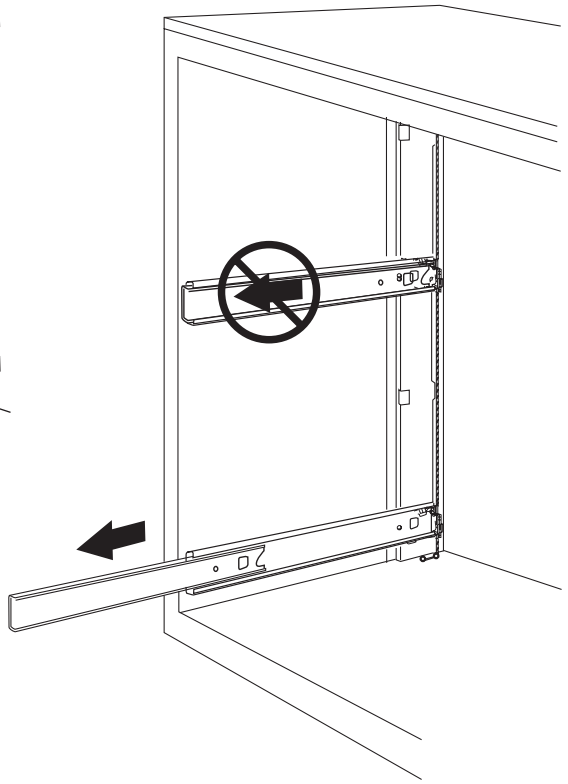
5. Starting with the lowest position, fully extend 1 set of slides. Position raised bin slots over slide tabs and press down until fully seated.