



### Caster Installation

1. Remove the caster kit from the drawer, the casters with brakes go on the front.
2. Lay the unit on its back.
3. While installing the caster, angle the plate to go over emboss 2 and then under the form and lance.
4. Position the plate so emboss 1 & 2 are in the ovoids of the caster plate.
5. Install 1 #8 T20 TORX in the screw hole.
6. Repeat steps 3 through 5 for the rest of the casters.

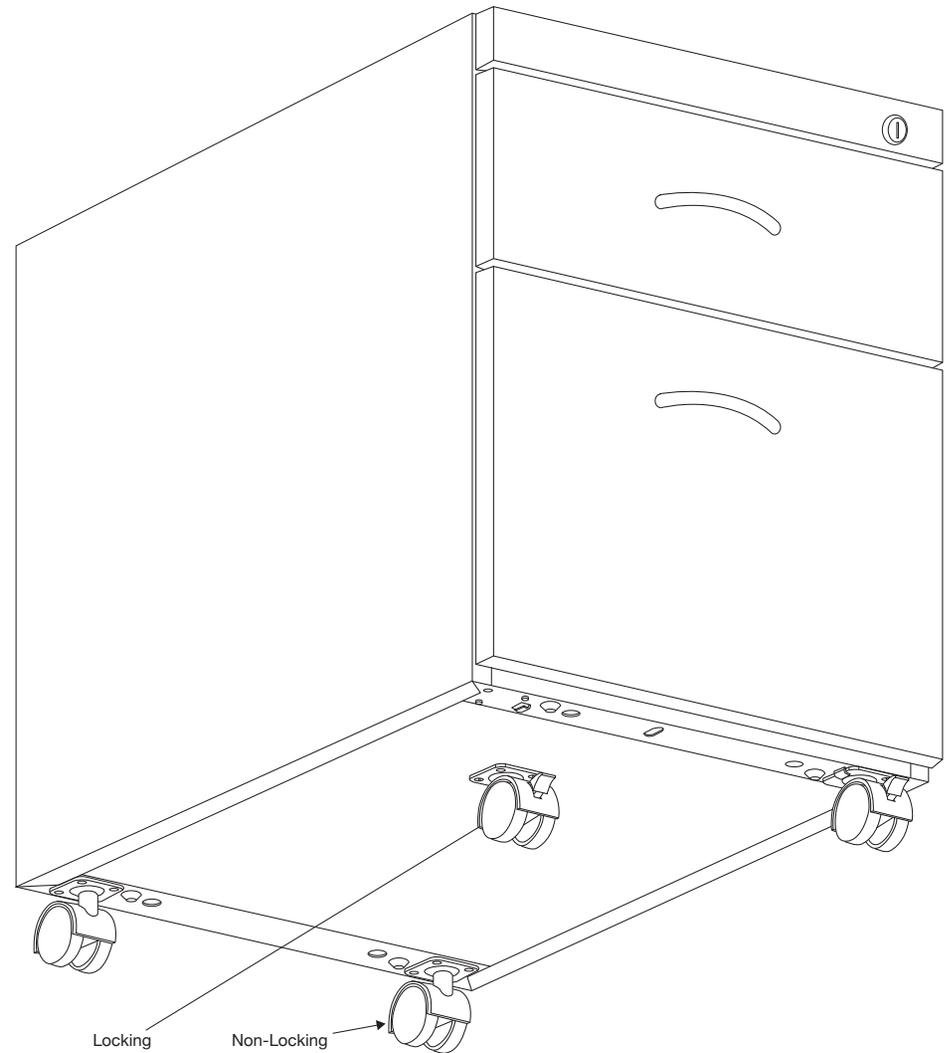

Tool(s) needed:

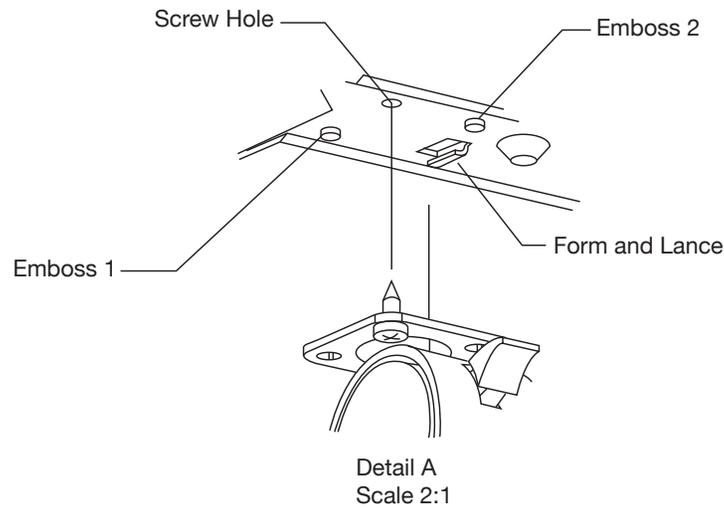

Torx hand screw driver

Optional Tools:



torx t20 bit



power drill

Part(s) included:



torx t20 screw