

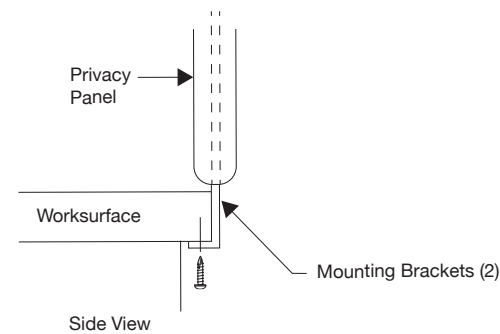
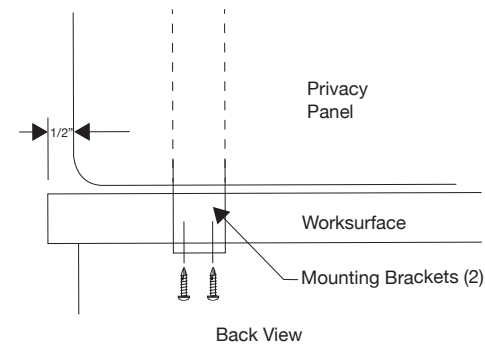


Privacy Panel Installation

1. Install mounting brackets into 2 slots in bottom of privacy panel.
NOTE: 60", 66", 72" Privacy Panels have 3 slots and mounting brackets.
2. Position privacy panel 1/2" from the end of a corresponding size work surface. Install (4) screws from bottom of 24", 30", 36", 48" privacy panels. (6) screws are needed to install 60", 66", 72" privacy panels.
NOTE: Bracket mounts under worksurface and slide inside the privacy panel. Make sure brackets are tight against worksurface (side view). Do not overtighten screws.
3. For proper alignment between two privacy panels, slide alignment bracket from the top into groove on side of each privacy panel

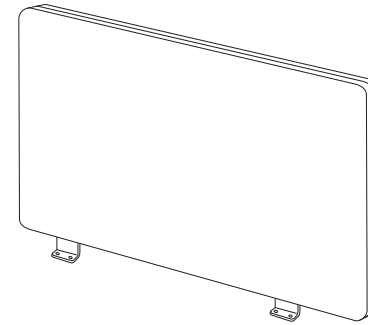

power drill

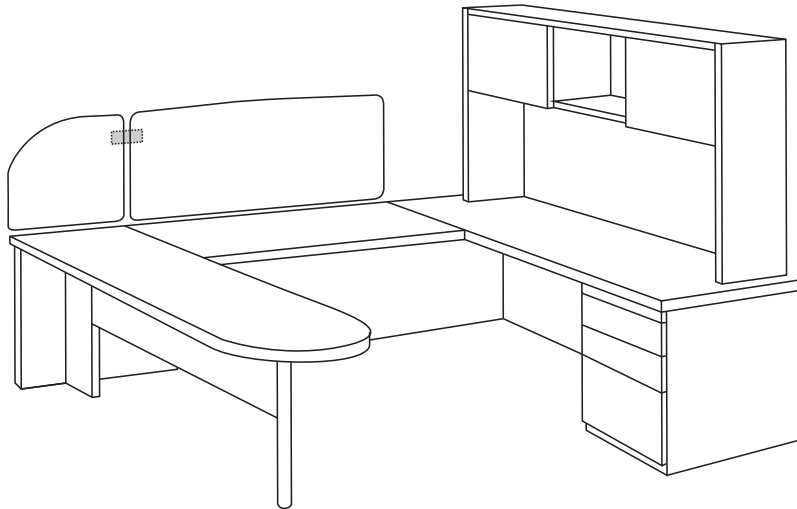

#2 Phillips



work surface screw



Phillips screw driver