

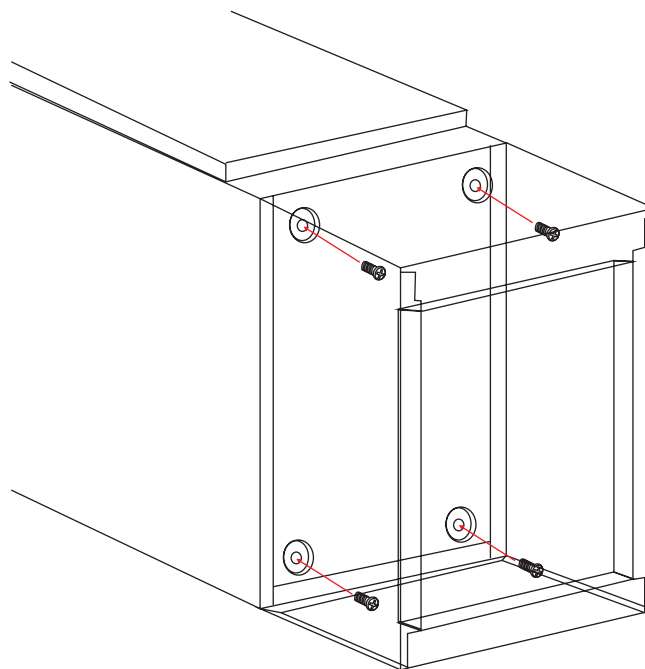


Base Installation

1. Using pliers, remove leveling glides from the bottom of the locker and store or discard them.
2. Install the four 3/8-16 x 1/2" Phillips pan head screws through the holes in the base into the threaded inserts of the locker.

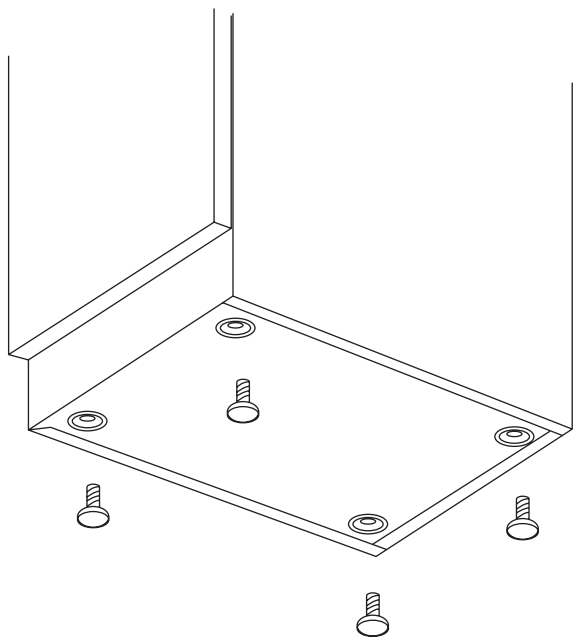


plinth base

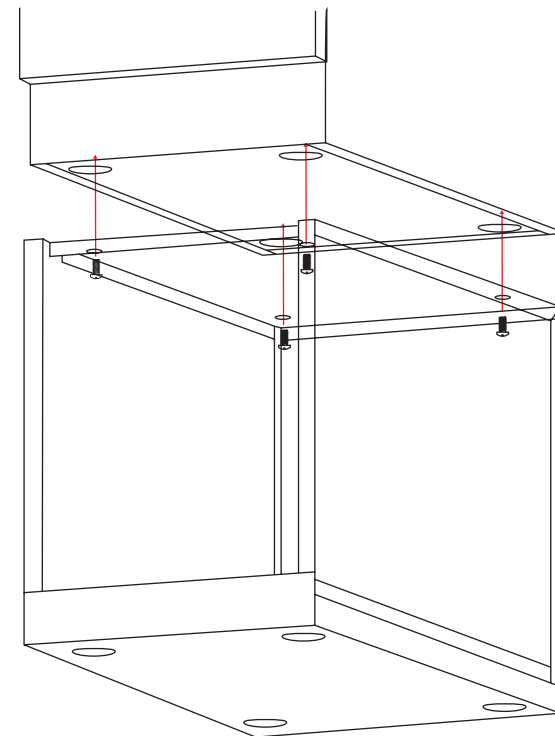

cubby base



power drill

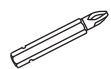

#2 Phillips



(4) 3/8 x 16 x 1/2" pan head



pliers