


(single, double, quad and cubbie lockers)


## Side-by-Side Ganging

1. Open door and remove false floor(s) by pushing down on the back of the floor in order to grab the front.
2. Align and level cabinets by adjusting leveling glides
3. Using an electric driver install the (4) #10 x 1/2" self drilling Phillips pan head screws through clearance/service holes on the side panels. Two service holes are located near the top and two near the bottom on each side as shown.
4. Insert the (4) cover plug caps on the top two service holes on each cabinet. The bottom service holes will be hidden by the false floor.
5. Replace false floor(s).

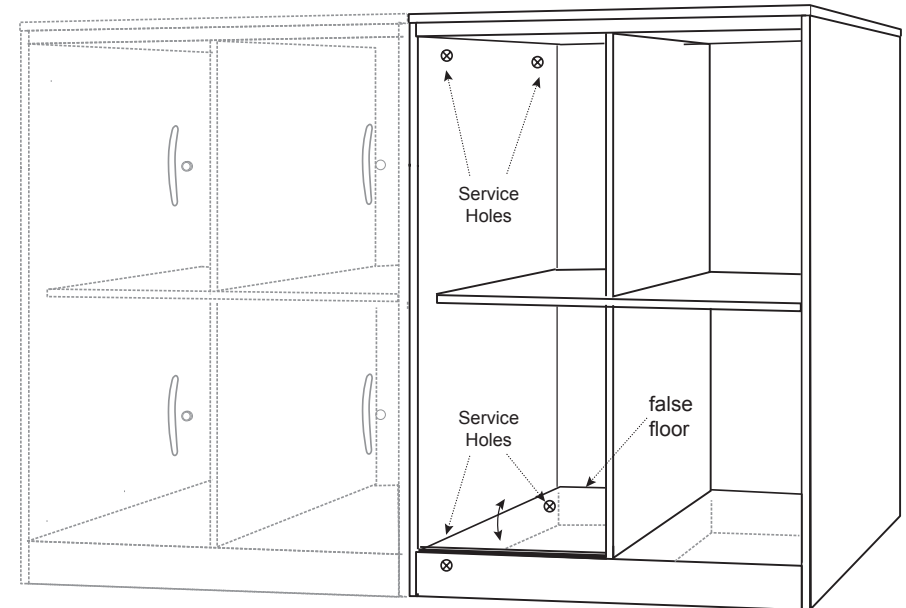

## Back-to-Back Ganging

1. Open door and remove false floor(s) by pushing down on the back of the floor in order to grab the front.
2. Align and level cabinets by adjusting leveling glides.
3. Drill 5/16" holes through back panel approximately 2" from top and 1/2" in from inside edges.
4. Insert 1/4" pan head screw through 5/16" holes and tighten using the provided washer and nut.
5. Replace false floors.

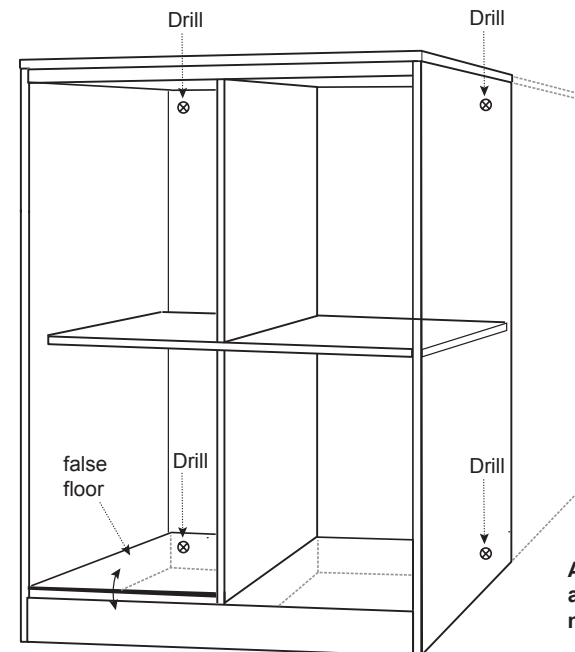

**DO NOT** pull downward on doors or drawers

**DO** Unload contents before moving unit or adjusting glides

**DO** Install against wall or gang to a similar unit

Part No. LCKX0006


All single wide lockers need to be anchored or ganged together to meet BIFMA stability requirements.




power drill



5/16" drill bit

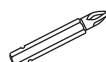

#2 Phillips

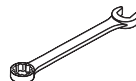

1/2" wrench



(4) #10x1/2" self tap screw



(4) 1/4 x 20 x 3/8" pan head



(4) 1/4 x 20 nut



cover plug cap