

(single, double, quad and cubbie lockers)

Side-by-Side Ganging and Back to Back Ganging

1. Align and level cabinets by adjusting leveling glides.
2. Using an electric drill/driver, pre-drill four holes through the sides or back with a 5/32" drill bit. The locations are approximately 2" from the front/back and 2" from the top/bottom. See print for suggested drilling locations. Next, attach both cabinets together using the supplied Phillips screws at each drill location. Make sure both cabinets are held securely so they don't push apart from each other.

(4 door cubby shown for these instructions)



DO NOT pull downward on doors or drawers


DO Unload contents before moving unit or adjusting glides

DO Install against wall or gang to a similar unit

Part No. LCKX0006

All single wide lockers need to be anchored or ganged together to meet BIFMA stability requirements.

Hole Locations:
Side by Side
Ganging

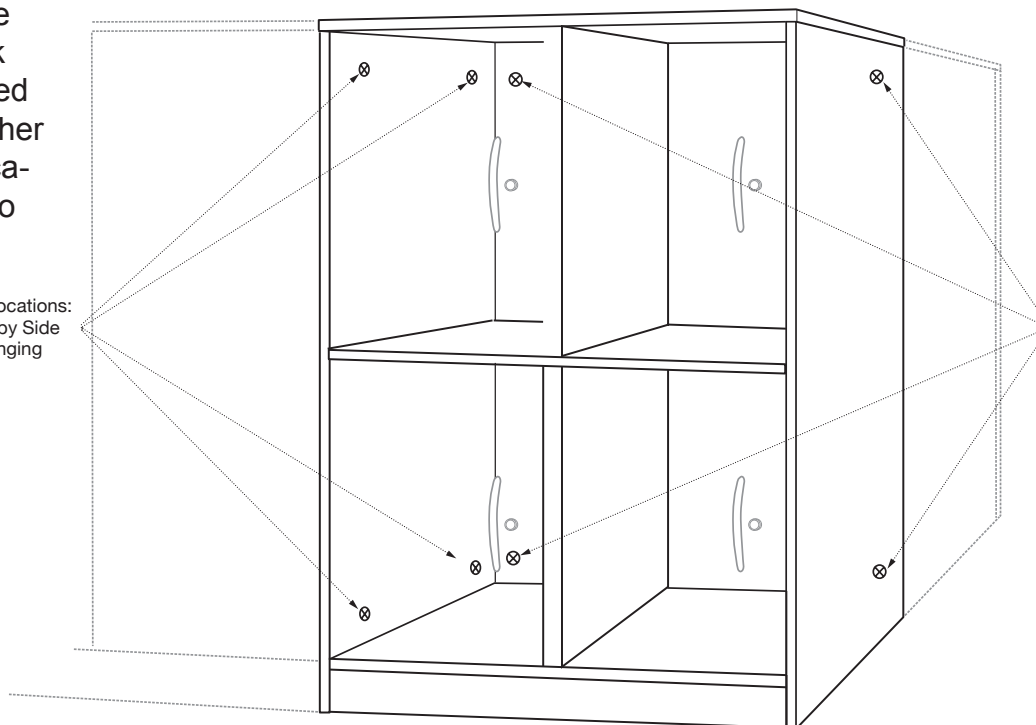


Hole Locations:
Back to Back
Ganging



electric drill/driver



5/32" drill bit

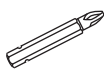

#2 Phillips



(4) #8 X 1-1/2 PFH Wood Screw