

Assembly Instructions

1. Place worksurface on a soft surface to protect from damage.

Fig. 1

2. For standard worksurface, align leg mounting plates with predrilled holes, 1/2" inset from edges. Fasten each leg using eight 1" Phillips wood screws. Peninsula (D) worksurfaces – align leg mounting plates with pre-drilled holes on curved side 1-5/8" from sides and 7-1/2" from center of table end.

Fig. 2




3. Pedestal is attached to worksurface using (4) 1" Phillips wood screws. Fully extend or remove pedestal drawers to access fastener locations. Align the pedestal with pre-drilled holes so it is 1/2" set-back from the worksurface edge on two sides. Repeat on opposite side for two pedestal desk. **Fig. 3**

4. While installing the pedestal casters, angle the plate to go over emboss 2 and then under the form and lance. Position the plate so emboss 1 & 2 are in the obrounds of the caster plate. Install 1 #8 T20 TORX in the screw hole. **Fig. 4**


5. Center modesty panel on work surface between supports and screw in (6) 1" wood screws. Front of modesty panel should be flush with the pedestal. **Fig. 5**

6. Close or replace all of the pedestal drawers. Carefully flip desk assembly upright.


7. Move desk to desired location.

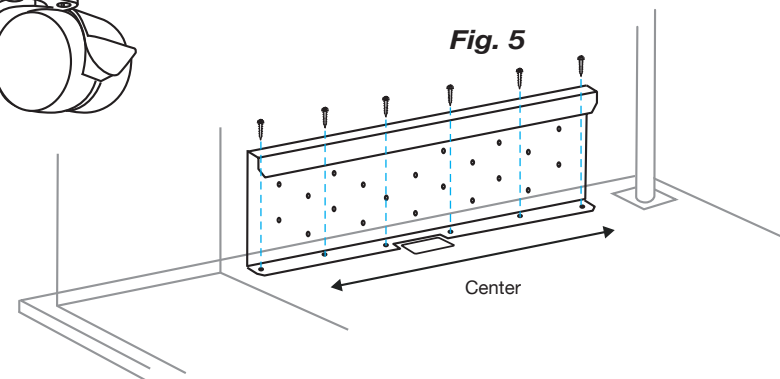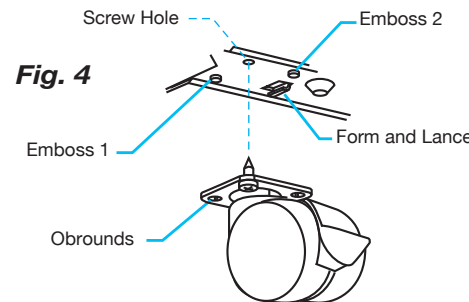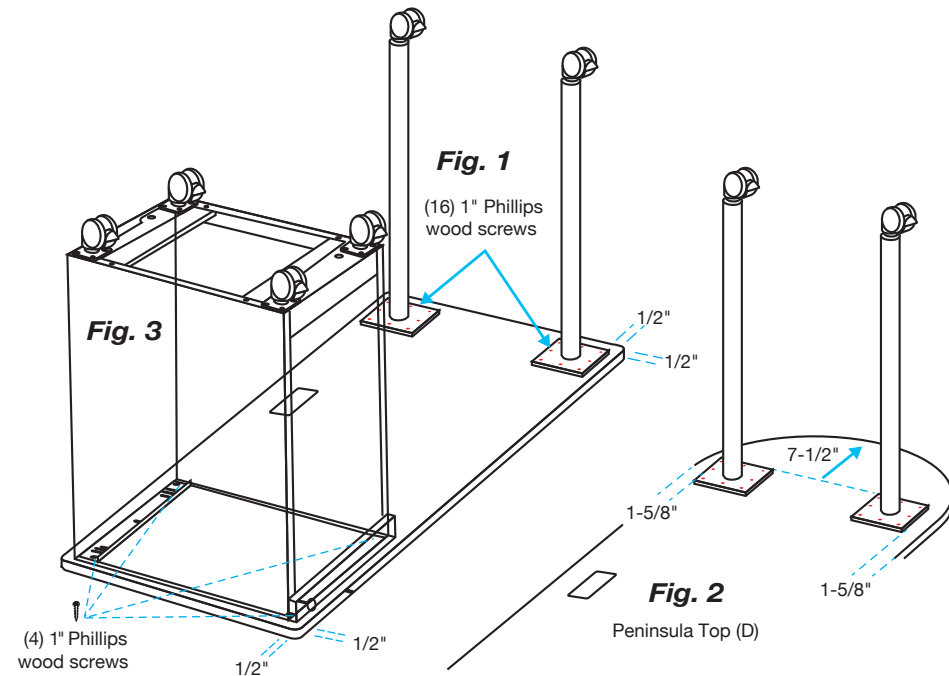

Tools Needed

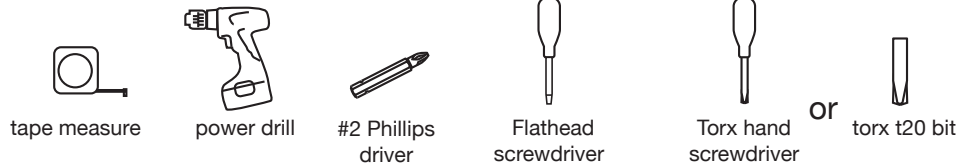



Hardware Included (varies depending on desk configuration)

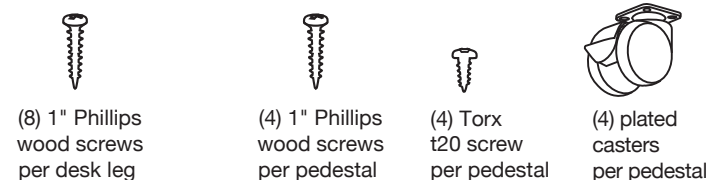

Remove Drawers


1. Open the drawer all the way.
Note: Only one drawer can be opened at a time due to the interlocking safety feature.
2. Insert the tip of a flathead screwdriver between the drawer pull and drawer where indicated. Pull drawer face up from the bottom to release drawer. Repeat for the remaining side. **Fig. 6**

Once the front corners are free, pull outward on the drawer to release from the rear connecting points.
Figs. 7 and 8

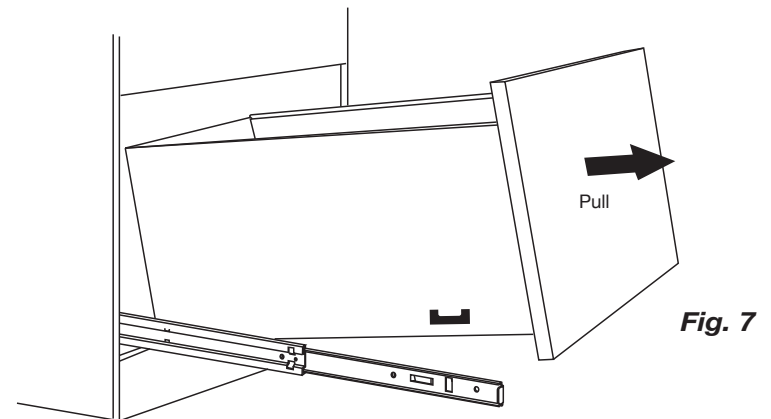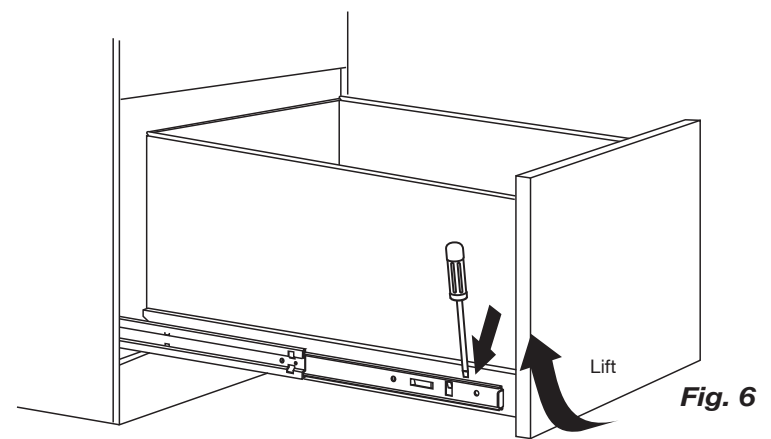

Install drawers:

1. Align slots in lower part of the drawer back with the corresponding rear connecting tabs on the back of the drawer slides. Push in firmly to lock together. **Fig. 8**

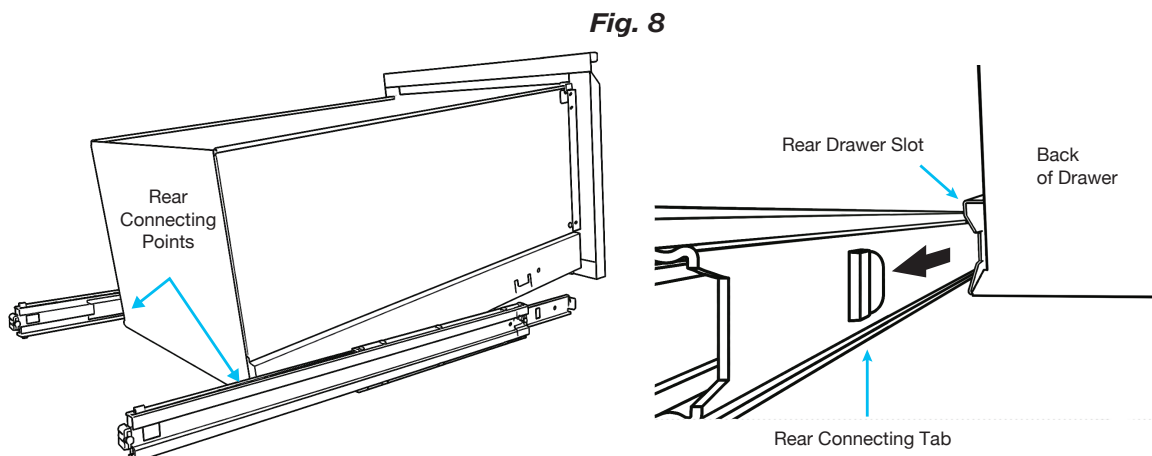

2. Align tabs in lower part of the drawer front with the corresponding front connecting slots on the front of the drawer slides. Push down firmly to lock both sides together. **Fig. 9**

